

**TRX BATERIE SONY NP-FV70 2100MAH**

Cena celkem:	<b>377 Kč</b> <b>(bez DPH: 311 Kč)</b>
Běžná cena:	<b>415 Kč</b>
Ušetříte:	<b>38 Kč</b>
Kód zboží:	BATRX3890
Part No.:	TRX-FV70
Záruka:	24 měs.
Stav:	Nové zboží

**Popis****TRX baterie Sony NP-FV70 2100 mAh**

Kompatibilní baterie pro videokamery Sony. Tato baterie je v provedení DECODED – lze nabíjet v originální nabíječce – funkce jako originál baterie bez nutnosti propojování kabelem.

**Poznámka:** Společnost Sony označuje Li-Ion články jinou nominální hodnotou napětí, než běžné normy, proto mohou být jejich baterie označeny 6,8 nebo 7,2 V! Použit je však lze bez omezení.

**ZÁKLADNÍ SPECIFIKACE**

**Kapacita:** 2500 mAh

**Napětí:** 7,2/7,4 V

**Technologie baterie:** Li-iontová

**Nahrazuje baterie:**

Sony NP-FV30  
Sony NP-FV40  
Sony NP-FV50  
Sony NP-FV70  
Sony NP-FV100  
Sony NP-FH30  
Sony NP-FH50  
Sony NP-FH60  
Sony NP-FH70  
Sony NP-FH100  
Sony NP-FP50  
Sony NP-FP70  
Sony NP-FP71  
Sony NP-FP90  
Sony NPFV30  
Sony NPFV40  
Sony NPFV50  
Sony NPFV70  
Sony NPFV100  
Sony NPFH30  
Sony NPFH50  
Sony NPFH60  
Sony NPFH70

Sony NPFH100  
Sony NPPF50  
Sony NPPF70  
Sony NPPF71  
Sony NPPF90

**Pro zařízení:**

DCR-DVD103, DCR-DVD105, DCR-DVD105E, DCR-DVD106, DCR-DVD106E, DCR-DVD108, DCR-DVD108E, DCR-DVD109, DCR-DVD109E, DCR-DVD110E, DCR-DVD115E, DCR-DVD150, DCR-DVD202E, DCR-DVD203, DCR-DVD203E, DCR-DVD205, DCR-DVD205E, DCR-DVD304E, DCR-DVD305, DCR-DVD306, DCR-DVD306E, DCR-DVD308, DCR-DVD308E, DCR-DVD310E, DCR-DVD403, DCR-DVD403E, DCR-DVD404E, DCR-DVD405, DCR-DVD405E, DCR-DVD406, DCR-DVD406E, DCR-DVD407E, DCR-DVD408, DCR-DVD408E, DCR-DVD410E, DCR-DVD450, DCR-DVD450E, DCR-DVD505, DCR-DVD505E, DCR-DVD506, DCR-DVD506E, DCR-DVD508, DCR-DVD508E, DCR-DVD510E, DCR-DVD602, DCR-DVD602E, DCR-DVD605, DCR-DVD605E, DCR-DVD610, DCR-DVD650E, DCR-DVD653, DCR-DVD653E, DCR-DVD703, DCR-DVD703E, DCR-DVD705, DCR-DVD705E, DCR-DVD708, DCR-DVD708E, DCR-DVD710, DCR-DVD755, DCR-DVD755E, DCR-DVD803, DCR-DVD803E, DCR-DVD805, DCR-DVD805E, DCR-DVD808E, DCR-DVD810, DCR-DVD850E, DCR-DVD905, DCR-DVD905E, DCR-DVD908E, DCR-DVD910, DCR-DVD92, DCR-DVD92E, DCR-HC16, DCR-HC16E, DCR-HC17, DCR-HC17E, DCR-HC18, DCR-HC18E, DCR-HC19E, DCR-HC20, DCR-HC20E, DCR-HC21, DCR-HC21E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26, DCR-HC26E, DCR-HC27, DCR-HC27E, DCR-HC28, DCR-HC28E, DCR-HC30, DCR-HC30E, DCR-HC30G, DCR-HC30L, DCR-HC30S, DCR-HC32, DCR-HC32E, DCR-HC33E, DCR-HC35E, DCR-HC36, DCR-HC36E, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, DCR-HC39E, DCR-HC40, DCR-HC40E, DCR-HC40S, DCR-HC40W, DCR-HC41, DCR-HC42, DCR-HC42E, DCR-HC43E, DCR-HC44E, DCR-HC45, DCR-HC45E, DCR-HC46, DCR-HC46E, DCR-HC47, DCR-HC47E, DCR-HC48, DCR-HC48E, DCR-HC51E, DCR-HC52, DCR-HC53E, DCR-HC62, DCR-HC62E, DCR-HC65, DCR-HC85, DCR-HC85E, DCR-HC94E, DCR-HC96, DCR-HC96E, DCR-SR100, DCR-SR100E, DCR-SR15E, DCR-SR15ES, DCR-SR190E, DCR-SR20E, DCR-SR200C, DCR-SR200E, DCR-SR21E, DCR-SR210E, DCR-SR220, DCR-SR220D, DCR-SR290E, DCR-SR30E, DCR-SR300, DCR-SR300C, DCR-SR300E, DCR-SR32E, DCR-SR33E, DCR-SR35E, DCR-SR36E, DCR-SR37E, DCR-SR38E, DCR-SR40, DCR-SR40E, DCR-SR42, DCR-SR42A, DCR-SR42E, DCR-SR45, DCR-SR46, DCR-SR46E, DCR-SR47, DCR-SR47E, DCR-SR47L, DCR-SR47R, DCR-SR47S, DCR-SR50, DCR-SR50E, DCR-SR52E, DCR-SR55E, DCR-SR57E, DCR-SR58E, DCR-SR60, DCR-SR60E, DCR-SR62, DCR-SR62E, DCR-SR65, DCR-SR67, DCR-SR67E, DCR-SR68E, DCR-SR68/R, DCR-SR68S, DCR-SR70E, DCR-SR72E, DCR-SR75E, DCR-SR77E, DCR-SR78E, DCR-SR80, DCR-SR80E, DCR-SR82, DCR-SR82C, DCR-SR82E, DCR-SR85, DCR-SR87, DCR-SR88, DCR-SR90E, DCR-SX15E, DCR-SX20EK, DCR-SX21E, DCR-SX30E, DCR-SX31E, DCR-SX33E, DCR-SX34E, DCR-SX41, DCR-SX43R, DCR-SX44, DCR-SX45, DCR-SX45B, DCR-SX45E, DCR-SX45EB, DCR-SX45EL, DCR-SX45ER, DCR-SX45L, DCR-SX45R, DCR-SX45S, DCR-SX50E, DCR-SX53E, DCR-SX63, DCR-SX65B, DCR-SX65E, DCR-SX65S, DCR-SX73E, DCR-SX83, DCR-SX85E, DCR-SX85S, DCR-SX85S, DCR-30, DR-SR10D

FDR-AX30, FDR-AX30/B, FDR-AX33, FDR-AX33/B, FDR-AX53, FDR-AX100, FDR-AX100/B, FDR-AX100E, FDR-AX100E/B, FDR-AXP33, FDR-AXP33/B, FDR-AXP35, FDR-AXP35/B, FDR-AXP35/TI

PXW-X70

HDE-SX43E, HDE-SX65E, HDR-CX100, HDR-CX100E, HDR-CX105E, HDR-CX105VE, HDR-CX106E, HDR-CX106VE, HDR-CX11E, HDR-CX11VE, HDR-CX110, HDR-CX110B, HDR-CX110/L, HDR-CX110/R, HDR-CX115E, HDR-CX115VE, HDR-CX116E, HDR-CX116VE, HDR-CX12, HDR-CX12E, HDR-CX120, HDR-CX130B, HDR-CX130E, HDR-CX130EB, HDR-CX130EL, HDR-CX130ER, HDR-CX130R, HDR-CX150, HDR-CX155E, HDR-CX155VE, HDR-CX160B, HDR-CX160E, HDR-CX170, HDR-CX180, HDR-CX180E, HDR-CX180EB, HDR-CX180EL, HDR-CX180ER, HDR-CX180ES, HDR-CX190, HDR-CX190B, HDR-CX190E, HDR-CX200, HDR-CX200B, HDR-CX200E, HDR-CX210, HDR-CX210B, HDR-CX210E, HDR-CX210L, HDR-CX210R, HDR-CX210S, HDR-CX250E, HDR-CX260VE, HDR-CX300, HDR-CX305E, HDR-CX305VE, HDR-CX330, HDR-CX350, HDR-CX350V, HDR-CX350VE, HDR-CX360E, HDR-CX360V, HDR-CX360VE, HDR-CX370V, HDR-CX410VR, HDR-CX450, HDR-CX455/B, HDR-CX500, HDR-CX500V, HDR-CX505VE, HDR-CX520, HDR-CX520V, HDR-CX520VE, HDR-CX550, HDR-CX550E, HDR-CX550V, HDR-CX550VE, HDR-CX560V, HDR-CX560VE, HDR-CX570E, HDR-CX580V, HDR-CX6, HDR-CX6EK, HDR-CX625, HDR-CX675/B, HDR-CX690E, HDR-CX7, HDR-CX7K/E, HDR-CX700E, HDR-CX700V, HDR-CX700VE, HDR-CX730E, HDR-CX740VE, HDR-CX760V, HDR-CX900, HDR-HC3, HDR-HC3E, HDR-HC3HK1, HDR-HC5, HDR-HC5E, HDR-HC7, HDR-HC7E, HDR-HC9, HDR-HC9E, HDR-HC9E/E, HDR-PJ10, HDR-PJ10E, HDR-PJ20, HDR-PJ200E, HDR-PJ230, HDR-PJ260V, HDR-PJ260VE, HDR-PJ30E, HDR-PJ30V, HDR-PJ30VE, HDR-PJ340, HDR-PJ380, HDR-PJ40V, HDR-PJ420VE, HDR-PJ430V, HDR-PJ50, HDR-PJ50E, HDR-PJ50V, HDR-PJ540, HDR-PJ580V, HDR-PJ580VE, HDR-PJ650V, HDR-PJ670, HDR-PJ710V, HDR-PJ740VE, HDR-PJ760V, HDR-PJ790V, HDR-PJ810, HDR-PJ810E, HDR-SR10, HDR-SR10D, HDR-SR10E, HDR-SR10E/E, HDR-SR11, HDR-SR11E, HDR-SR11E/E, HDR-SR12, HDR-SR12E, HDR-SR12E/E, HDR-SR5, HDR-SR5C, HDR-SR5E, HDR-SR7, HDR-SR7E, HDR-SR8, HDR-SR8E, HDR-SX-43L, HDR-SX43S, HDR-SX-65L, HDR-SX65R, HDR-TD10, HDR-TD10E, HDR-TD20V, HDR-TD20VE, HDR-TD30V, HDR-TG1, HDR-TG1E, HDR-TG1E/E, HDR-TG3E, HDR-TG5V, HDR-UX10, HDR-UX19E, HDR-UX20, HDR-UX20E, HDR-UX20E/E, HDR-UX3E, HDR-UX5, HDR-UX5E, HDR-UX7, HDR-UX7E, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106, HDR-XR106E, HDR-XR150, HDR-XR155E, HDR-XR160, HDR-XR160E, HDR-XR200VE, HDR-XR260V, HDR-XR260VE, HDR-XR350, HDR-XR350E, HDR-XR350V, HDR-XR350VE, HDR-XR500V, HDR-XR500VE, HDR-XR520V, HDR-XR520VE, HDR-XR550, HDR-XR550E, HDR-XR550V, HDR-XR550VE

HXR-MC50U

NEX-VG10, NEX-VG10EH, NEX-VG10H, NEX-VG10HB, NEX-VG20E, NEX-VG20EH, NEX-VG20H, NEX-VG20HB, NEX-VG30, NEX-VG30E, NEX-VG30EH, NEX-VG30H, NEX-VG30HB, NEX-VG900, NEX-VG900E a další